



Easy2... Display options

Display Showing Vehicle GVM (Gross Vehicle Mass)
Ch1: Front axle weight Ch2: Rear axle weight

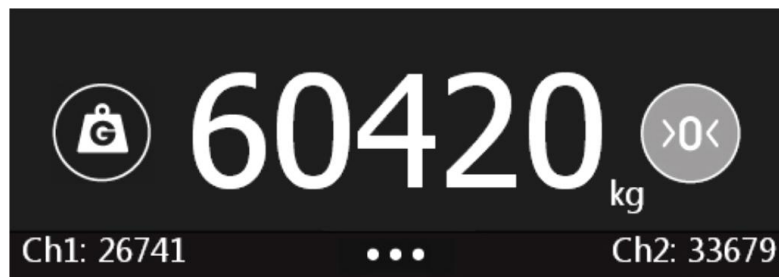

Display showing Vehicle NET (Load)
Ch1: Front axle weight Ch2: Rear axle weight

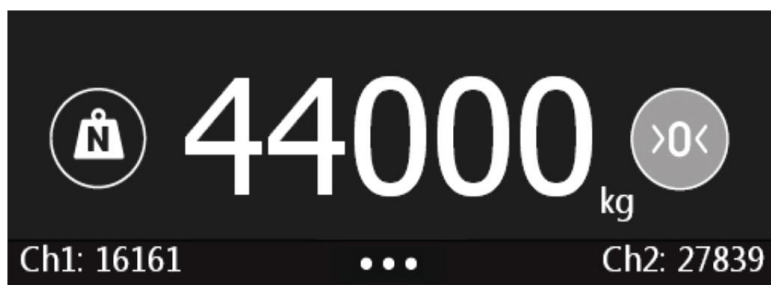


Easy2... Alarm bar features

The alarm bar is displayed below the weight on the Home Screen.

When the gross weight of the truck hits 80% of the set Amber weight, the bar will fill at 2% increments from 80% to 100%.




Alarm bar is empty when gross weight is < 80% of Amber weight.

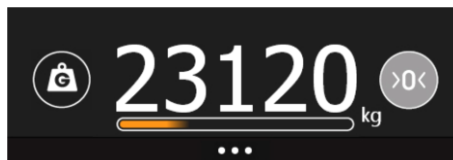

Alarm bar incrementally fills. (88%)



Alarm bar incrementally fills. (94%)

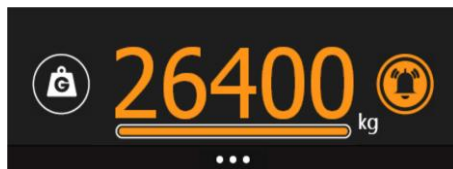

Amber alarm threshold reached. Alarm 1 triggered.



Red alarm threshold reached. Alarm 2 triggered.