


## Weigh across your trailer fleet.

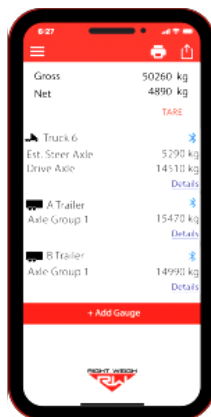

The remote trailer air sensor node is used in conjunction with the exterior digital display hub. This sensor mounts to the trailer to monitor its axle group. Calibration is performed on the truck mounted display, but the calibration data is stored to the sensor itself. This allows the trailer to be swapped from truck to truck and always read the correct weight. The unit is only compatible with trailer air suspensions with one height



## Truck-Tech UK

On-board weighing - load management systems



### Interchangeable:

Exterior economical solution for fleets with multiple trailers. The display is mounted on the tractor to monitor the drive axle suspension and calculate an estimated Steer axle weight; the exterior hub can be connected to any remote trailer sensor to also monitor the trailer axle group with the app then displaying full vehicle load distribution including Gross and Net. Models are available in both one and two air sensor configurations, for tractor drive axle groups with either one or two Height Control Valves (HCV). Bluetooth-Enabled to display your weights on your Android or iOS device in real time, download the free app on Google Play and the App Store.

Truck-Tech UK Ltd  
www.truck-techuk.co.uk - 01427 875 800  
info@truck-techuk.co.uk